



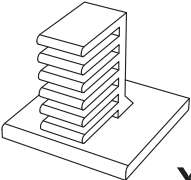


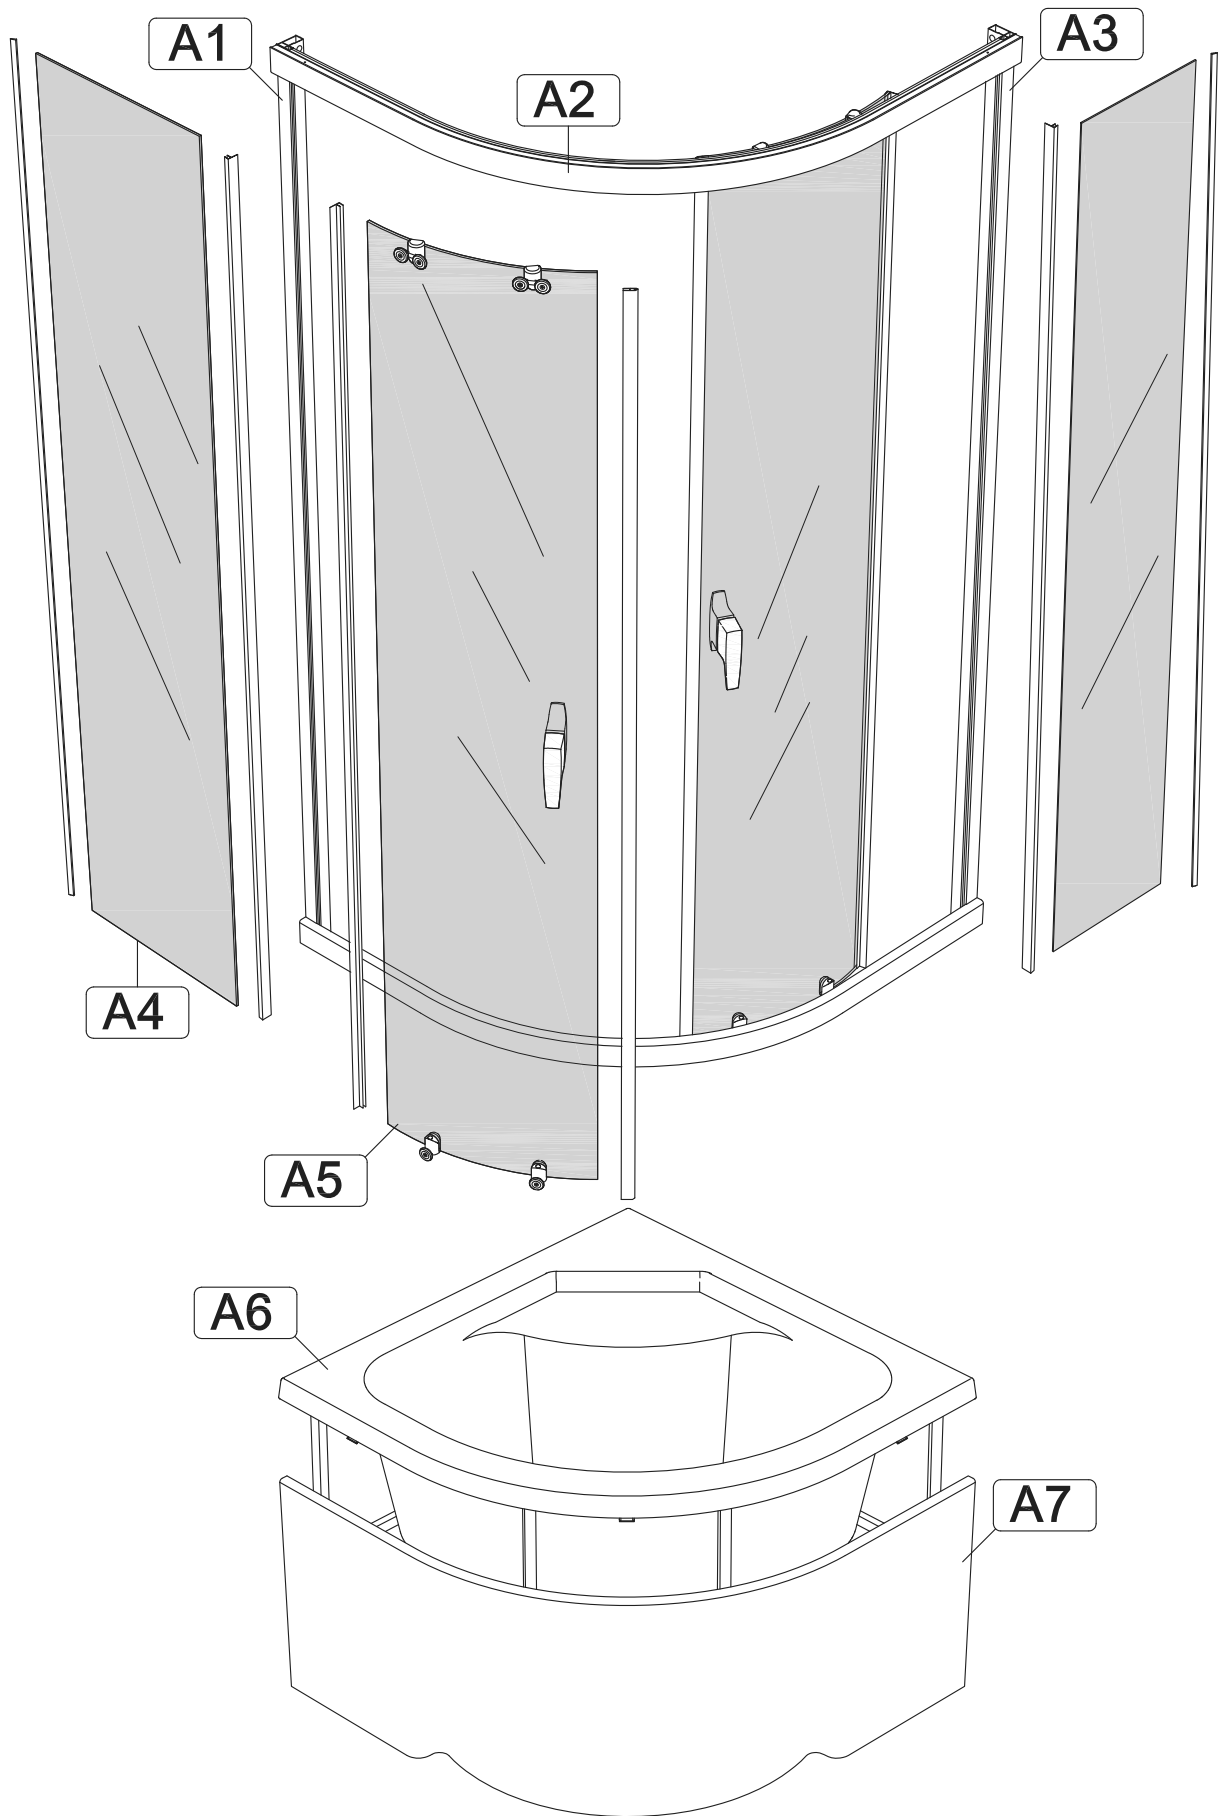



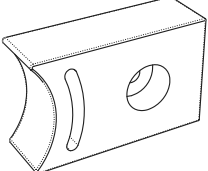

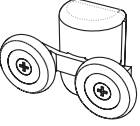


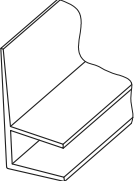


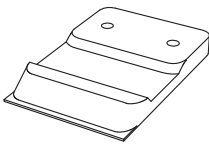

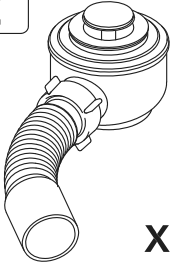










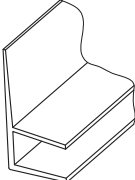
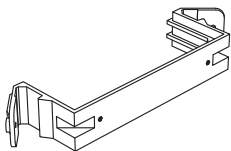
ВИРГО



Инструкция по сборке
душевой кабины





		B1  x3	B2  x1	B3  x2
B4  x2	B5 3.5x50  x2	B6 3.5x19  x10	B7 3.5x19  x6	B8 3.5x12  x8
B9 6x50  x2	B10  x10	B11  x4	B12  x4	B13  x4
B14  x4	B15  x2	B16  x4	B17  x2	B18  x2

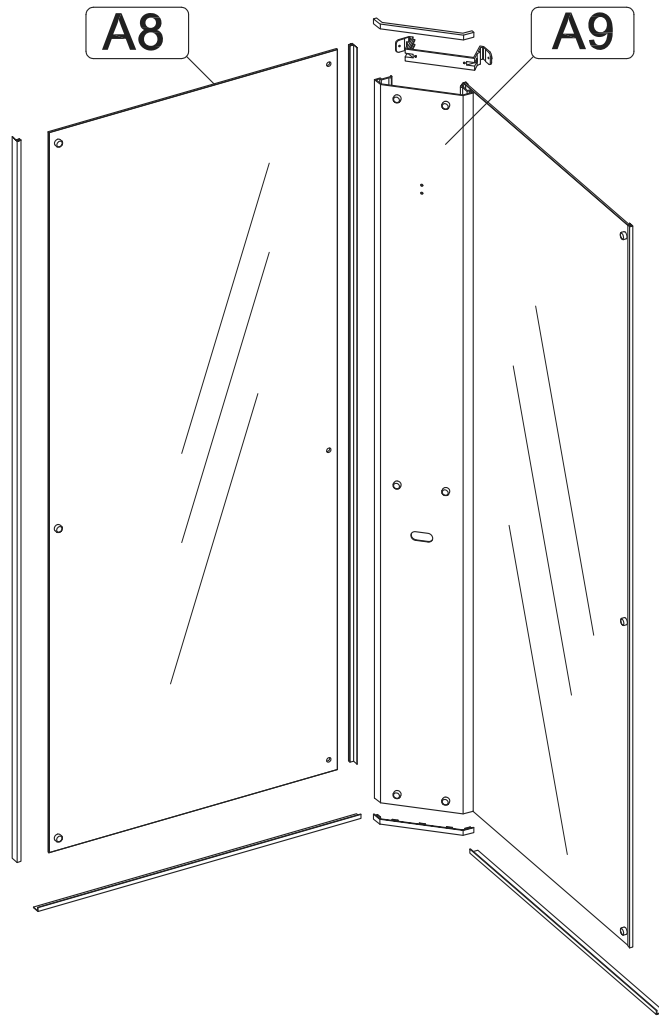

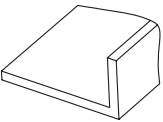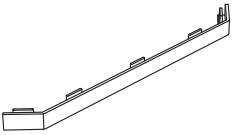
<p>B19</p>  <p>x2</p>	<p>B20</p>  <p>x2</p>	<p>B21</p>  <p>x12</p>	<p>B22</p>  <p>x12</p>	<p>B23</p>  <p>x6</p>
<p>B24 3.5x19</p>  <p>x12</p>	<p>B25 3.5x15</p>  <p>x6</p>	<p>B26 M3.5</p>  <p>x6</p>	<p>B27</p>  <p>x4</p>	<p>B28</p>  <p>x3</p>

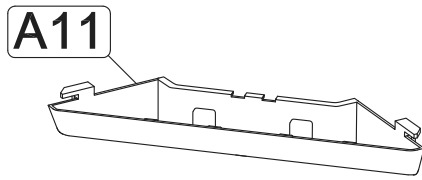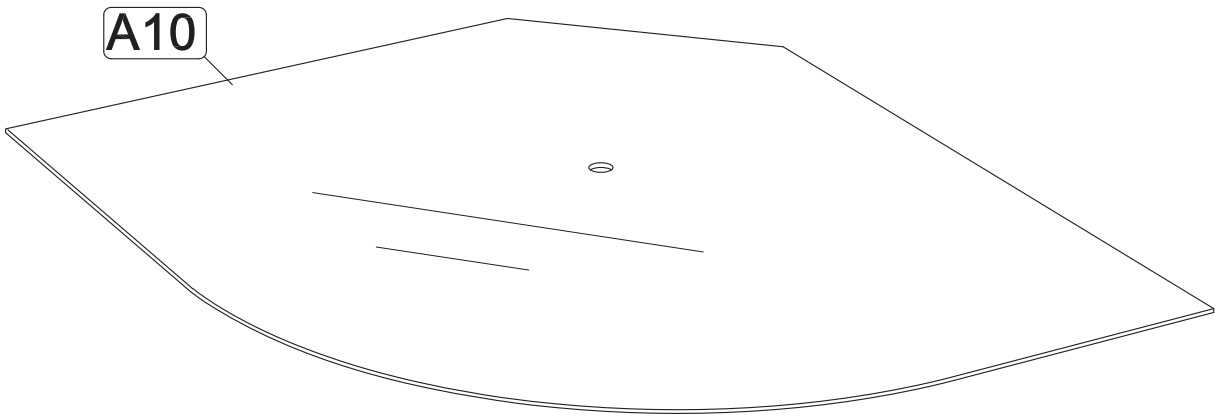

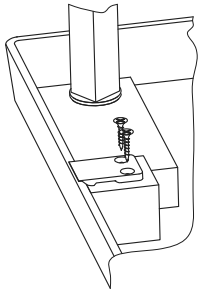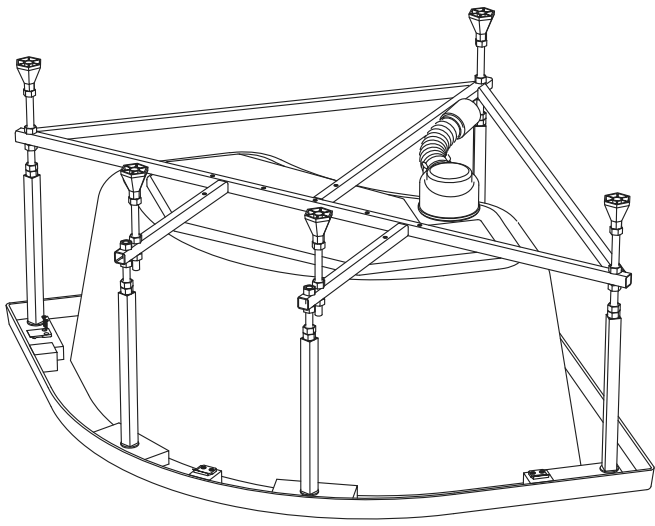


B1
B7


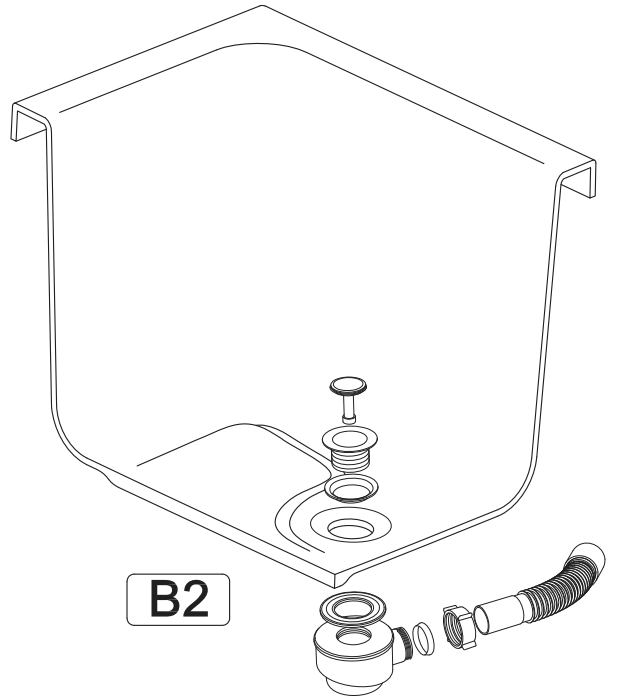







B2


A6 **A2**

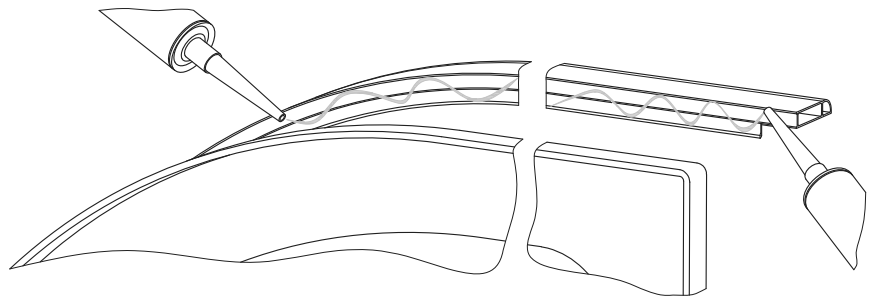

B3
B6

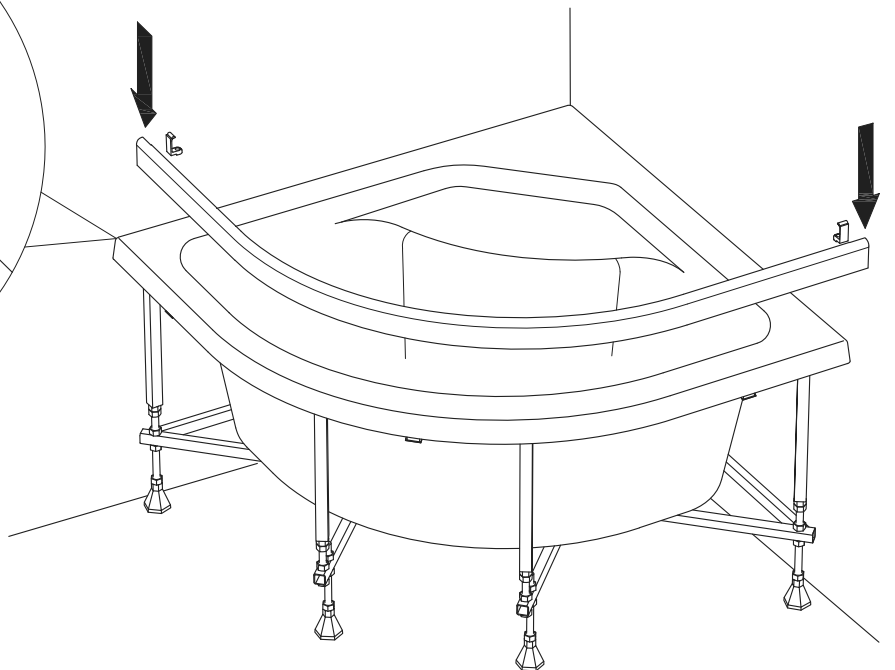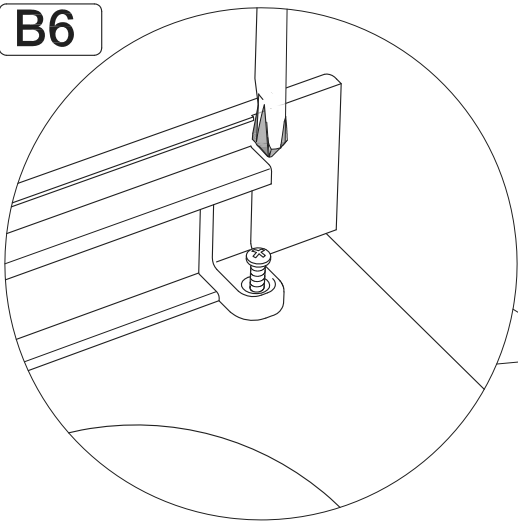

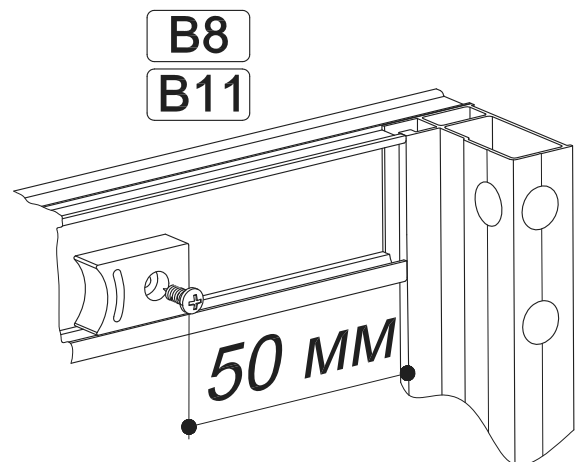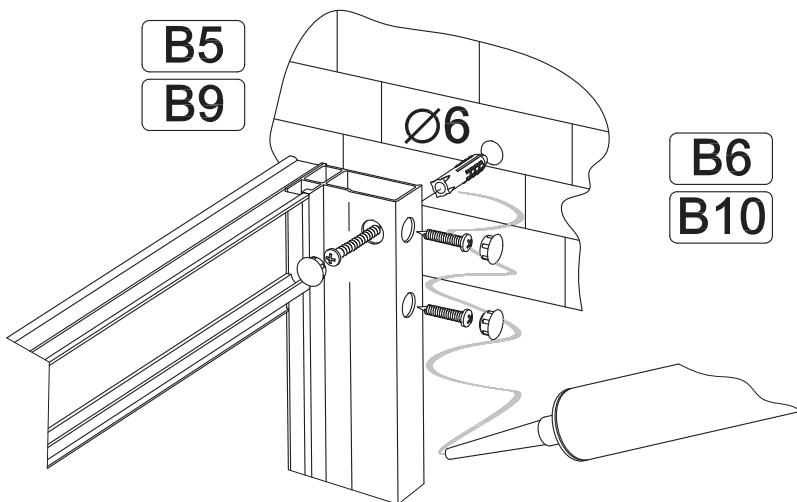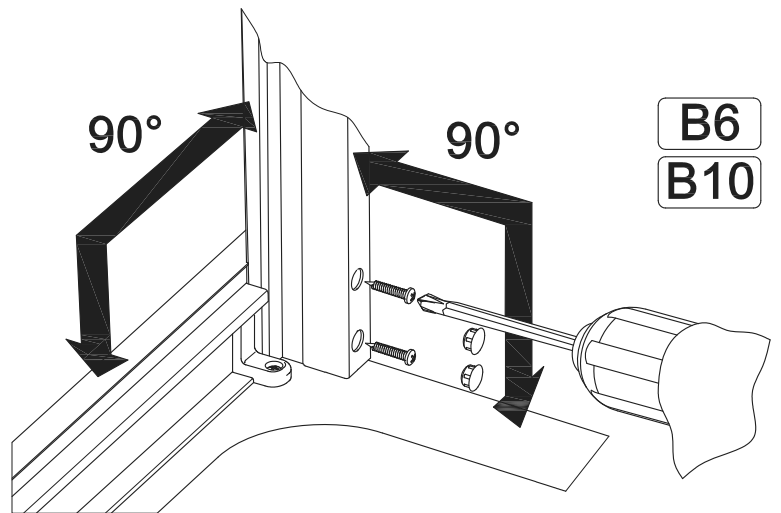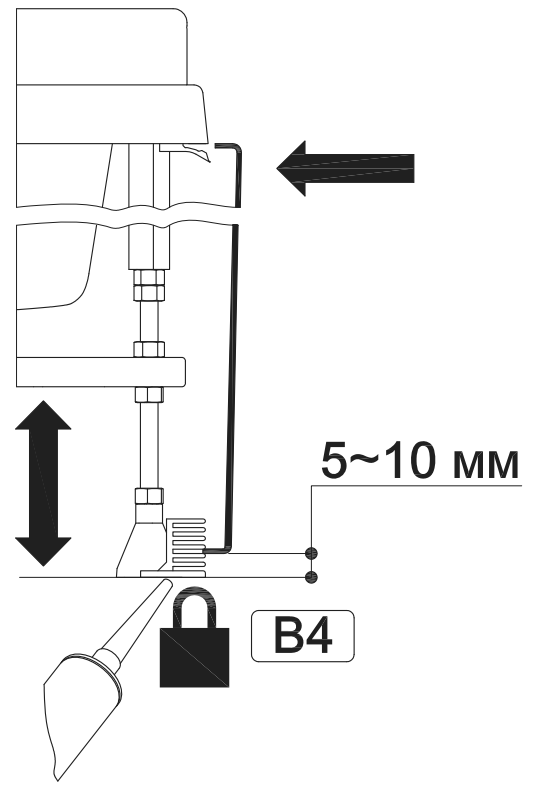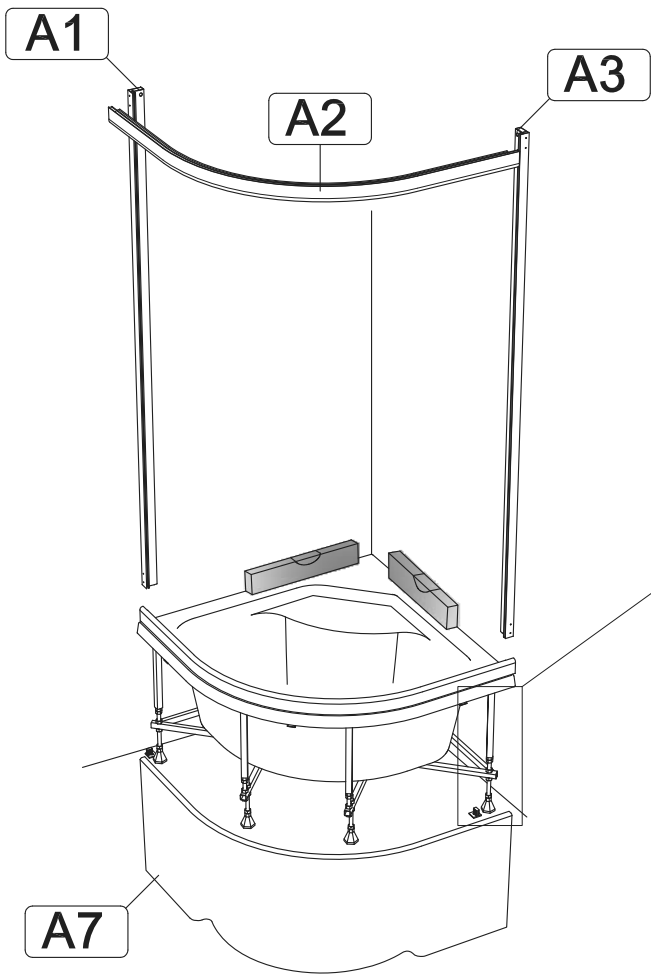

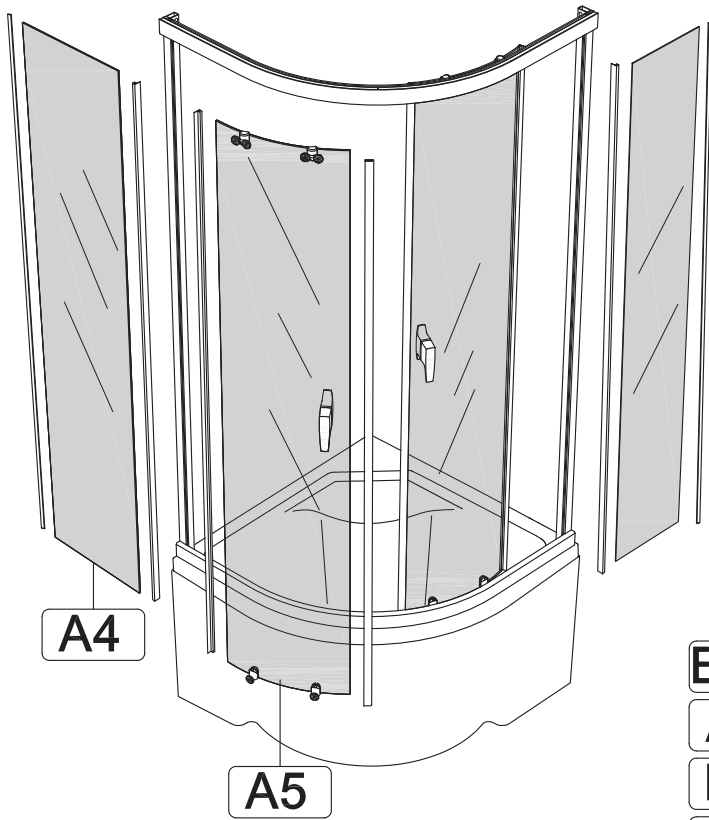


B16 ✂ L=1640



A4

B8

B12

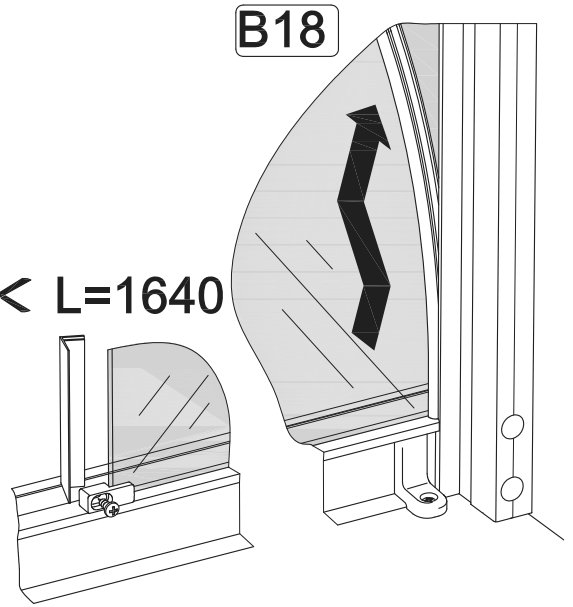

B16 ✂ L=1709

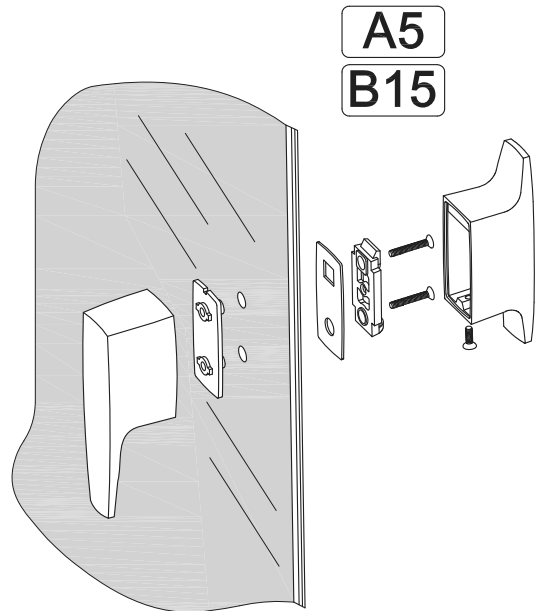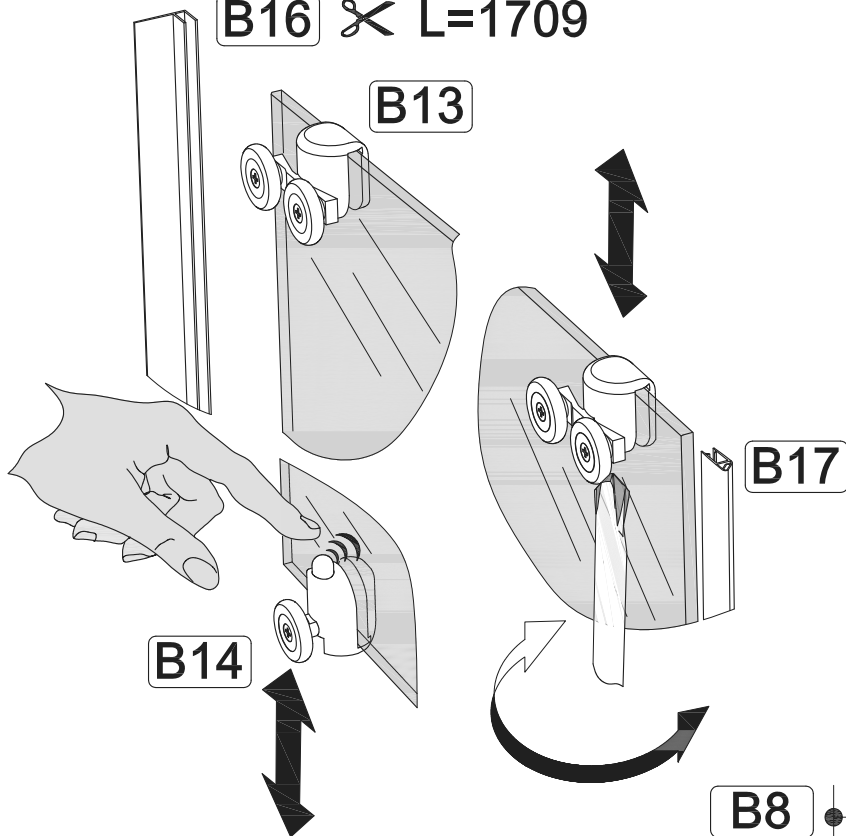

B8


1/2

1/2



B8

B11



B11


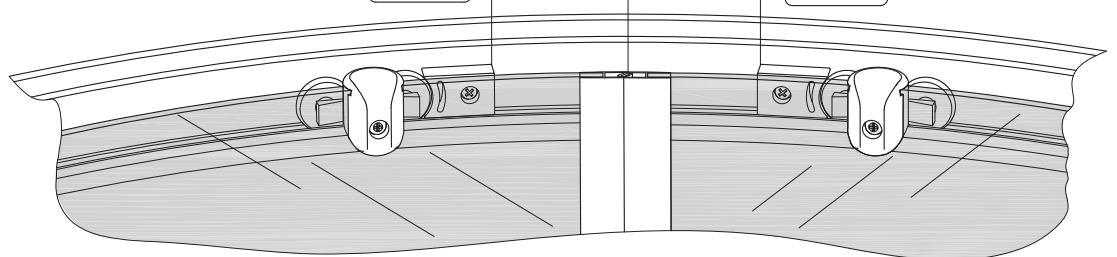


A8

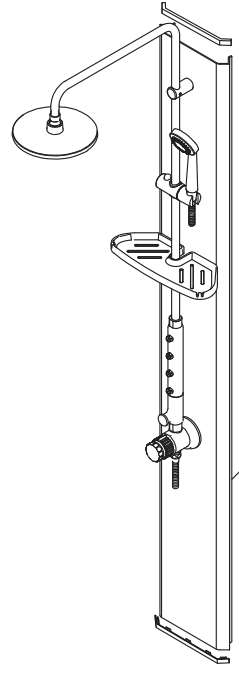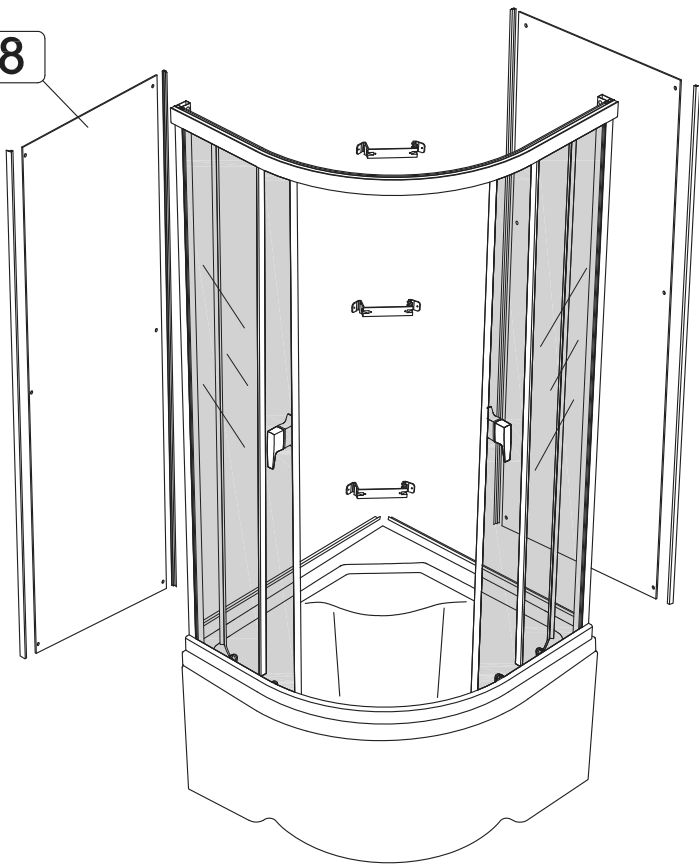

B19

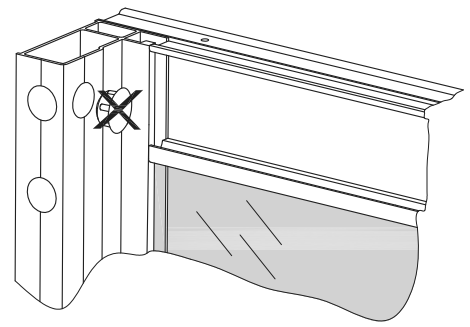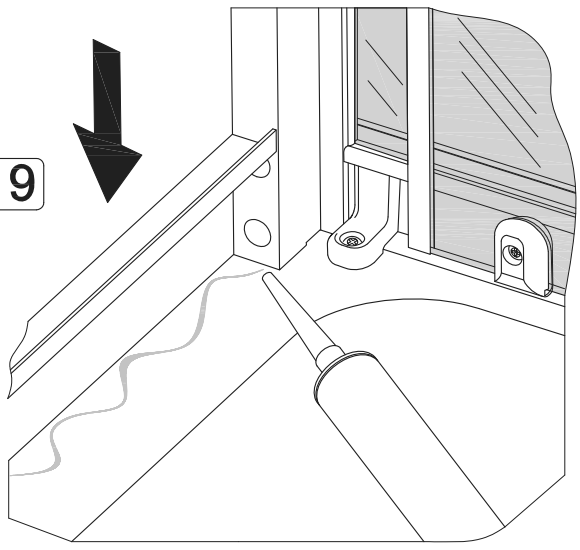


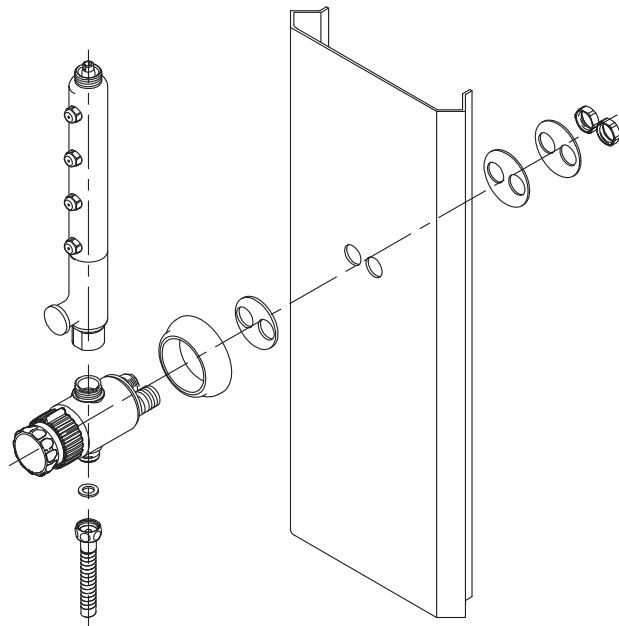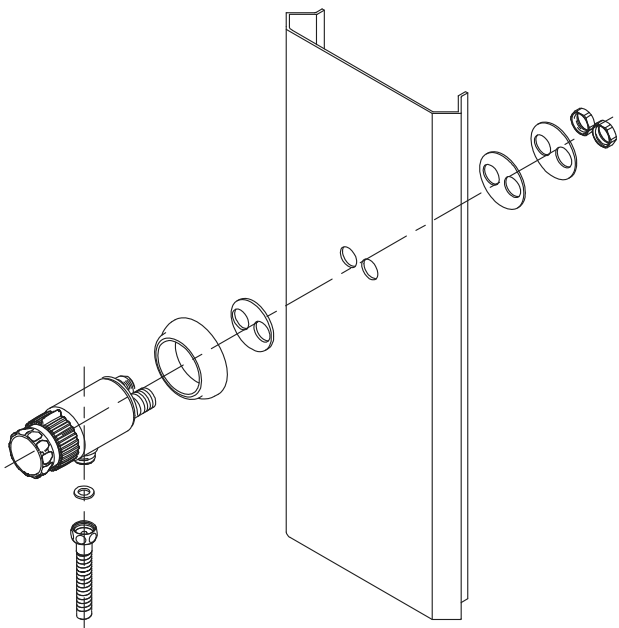


**ЭКО
B3005**

**СТАНДАРТ
B2005**


**ЛЮКС
B2005M**

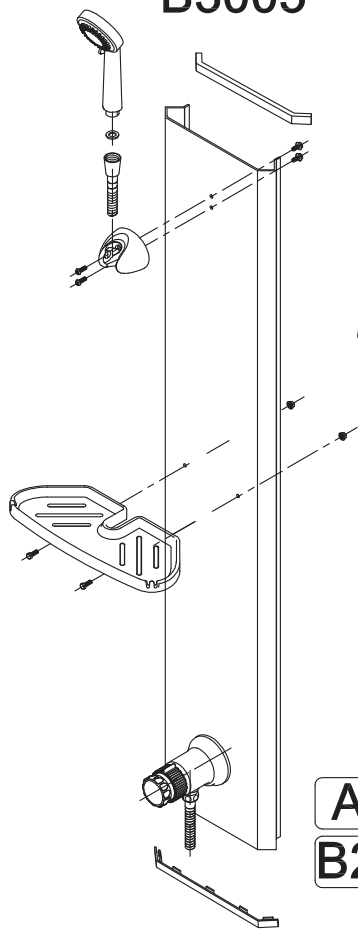

**A9
B20**


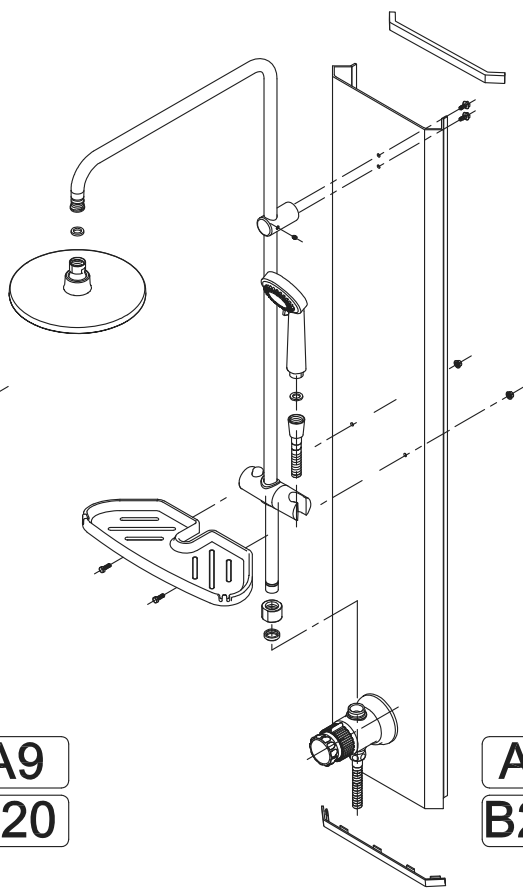


**A9
B20**

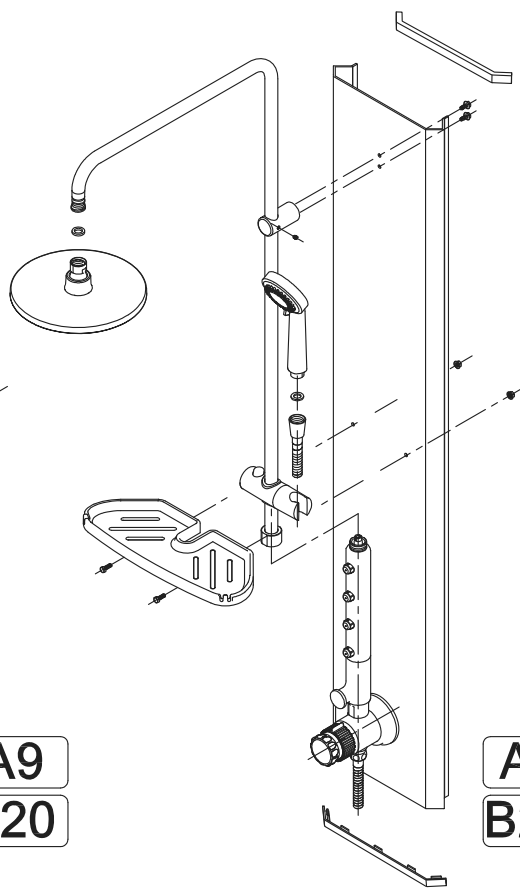


**A9
B20**

A8

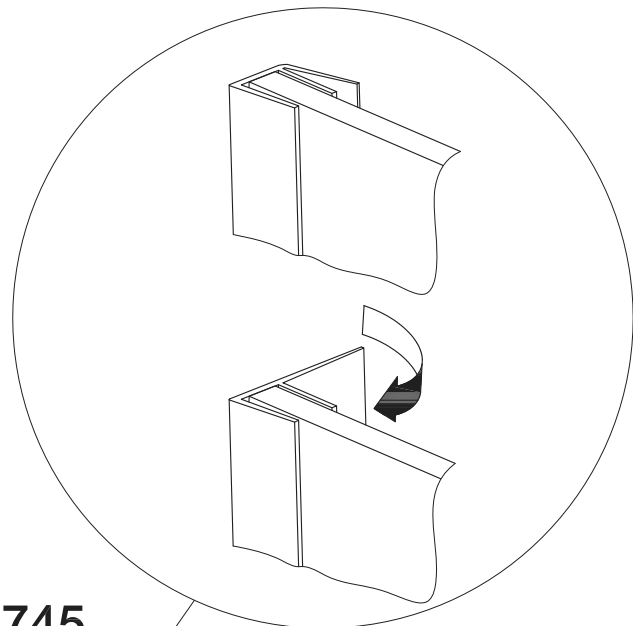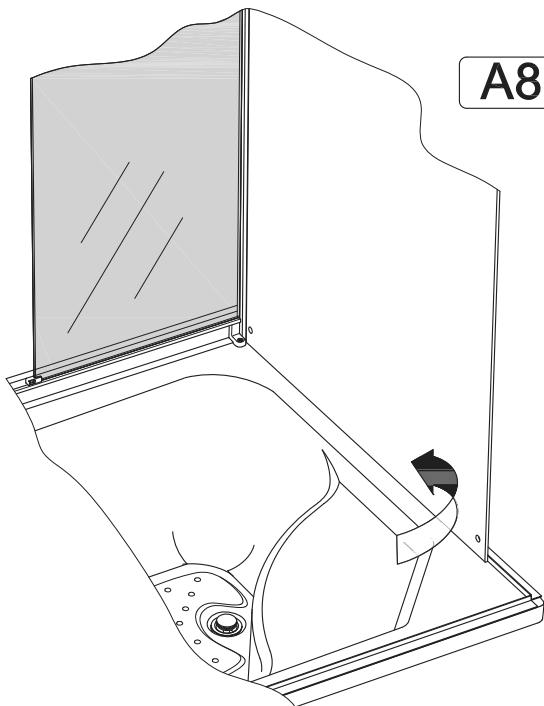

B27 ✂ L=1745

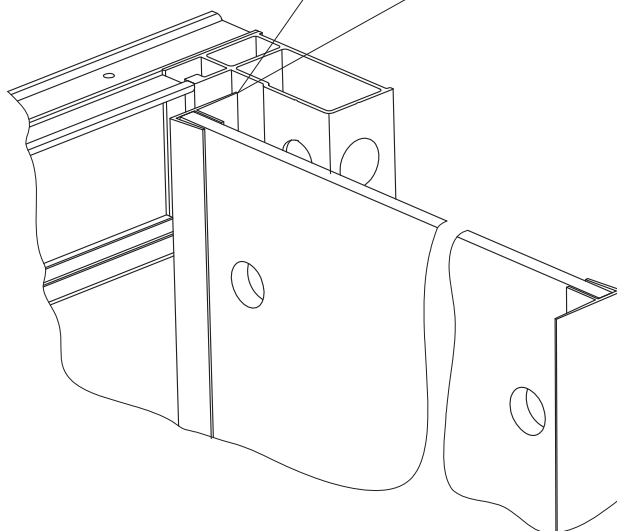


B27 ✂ L=1733

B21

B22

B24

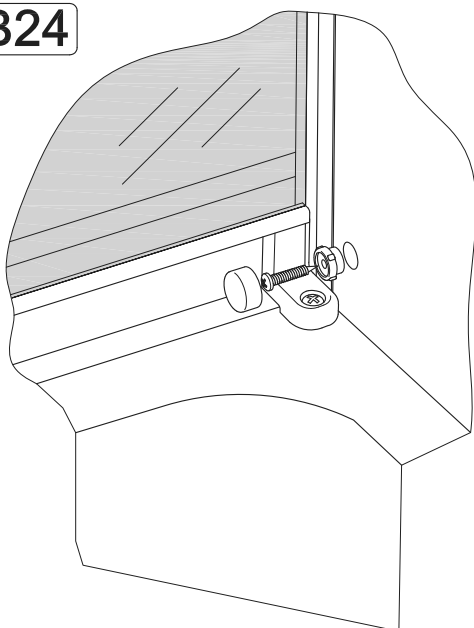

B22

B25

B26

B28

