

599-8005

Installation instructions



SIZE: 90*90*205 CM



Installation instructions

Tools Required(not Supplied)


when you're ready to start,make sure that you have the following tools to hand,plenty of space and a clean dry area for assembly.

Two people are needed.


Please note:although these instructions are comprehensive,We always recommend that a technically competent installer should undertake installation.

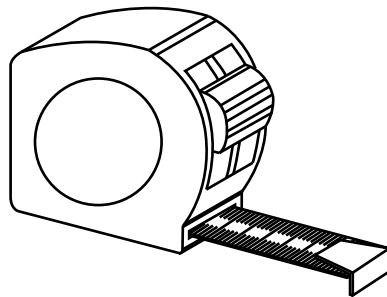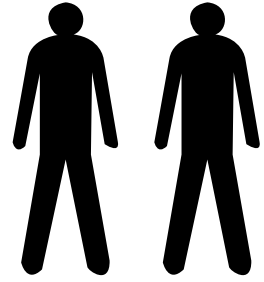

Tape measure



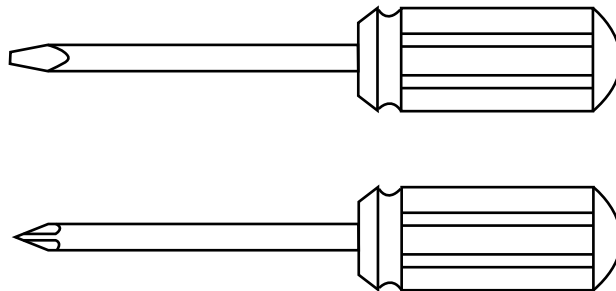


Screwdriver

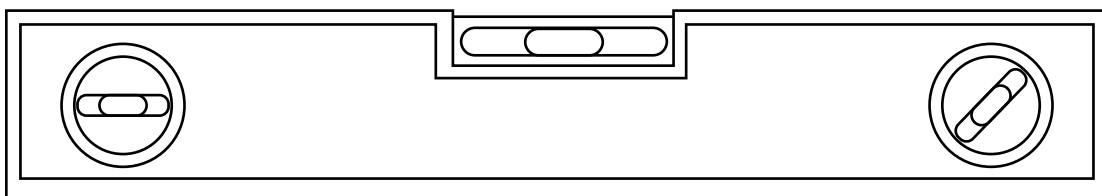


Spirit Level





Installation instructions

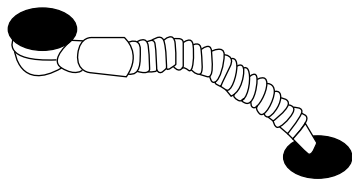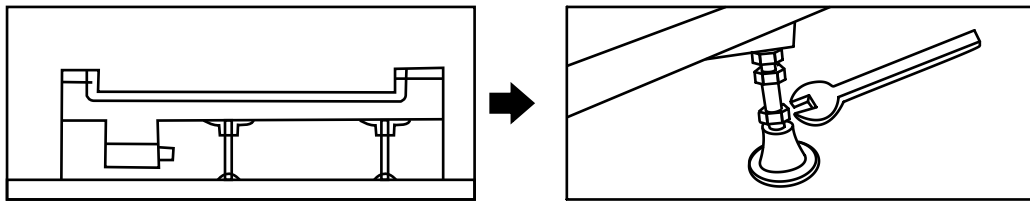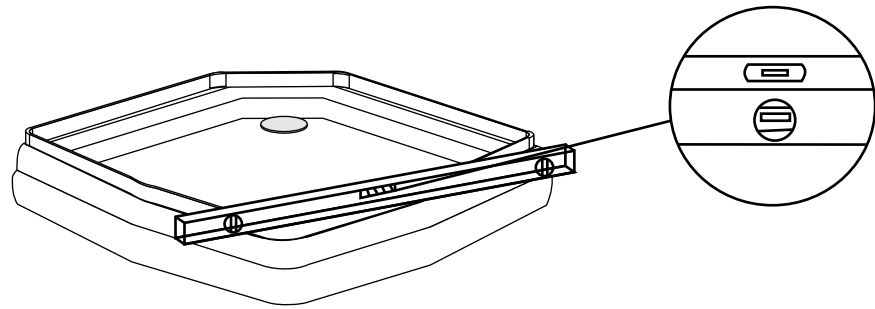




Lift the rear part of bottom basin, and then insert one end of the pipe into the drainage hole

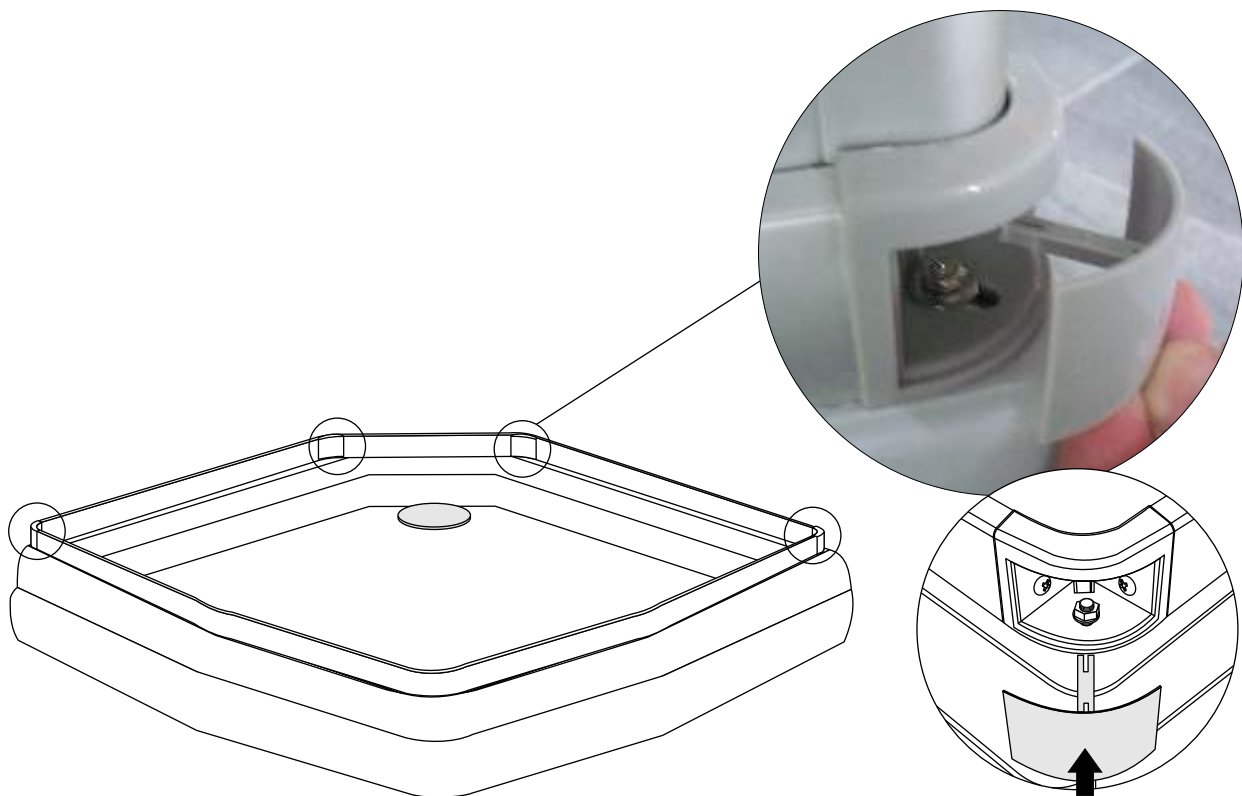



Installation instructions

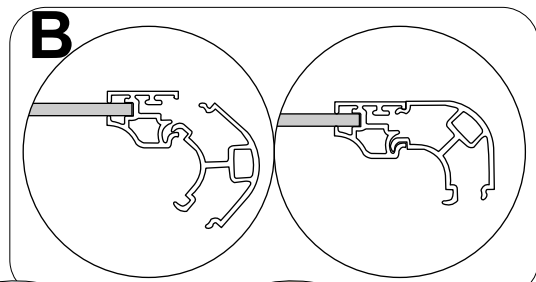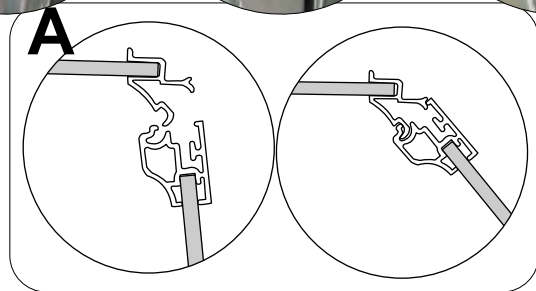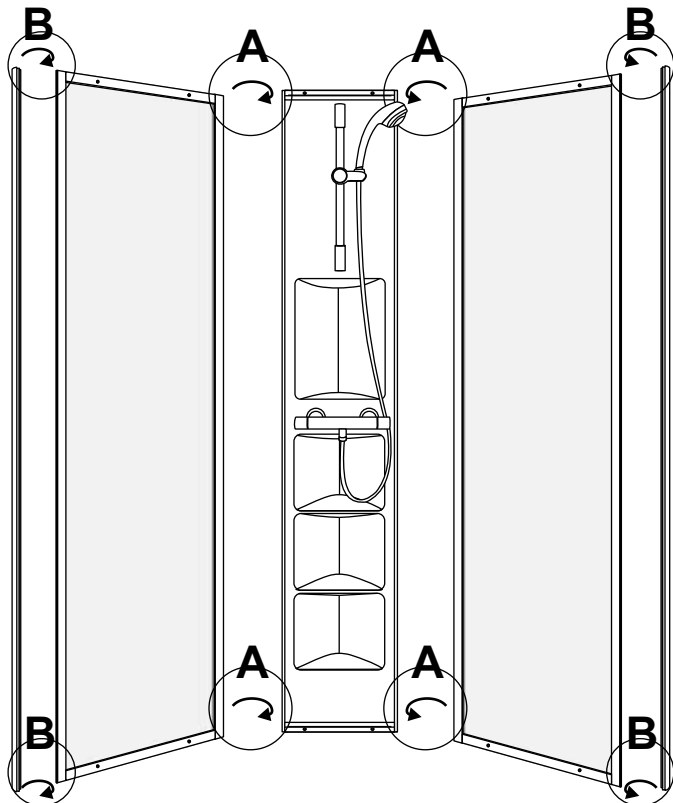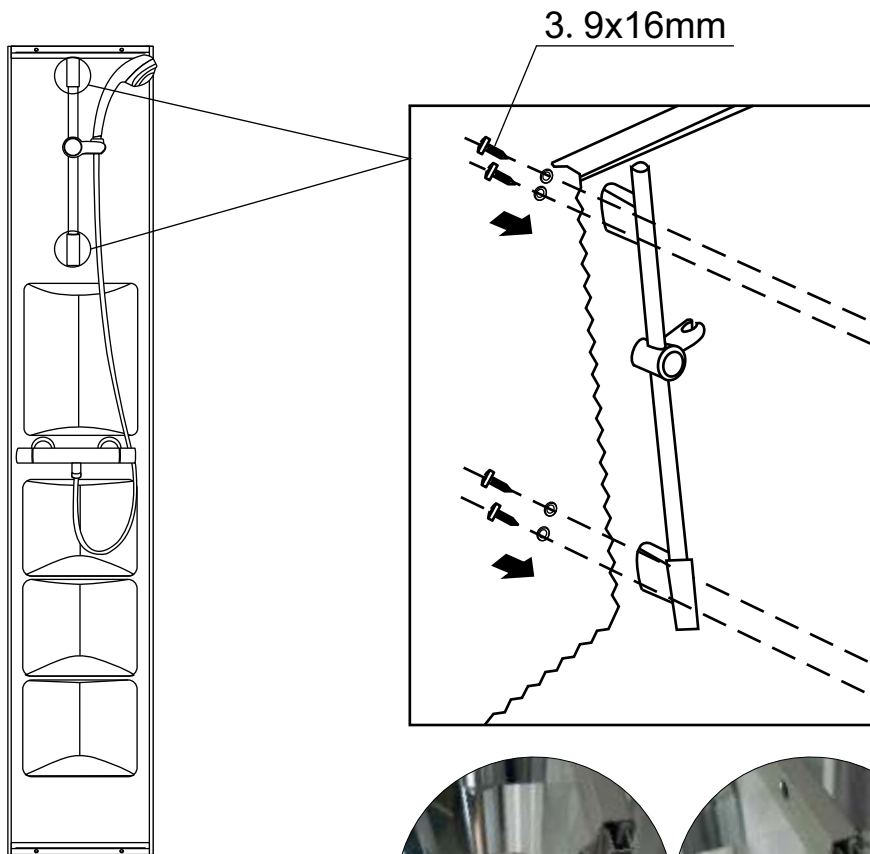






Installation instructions

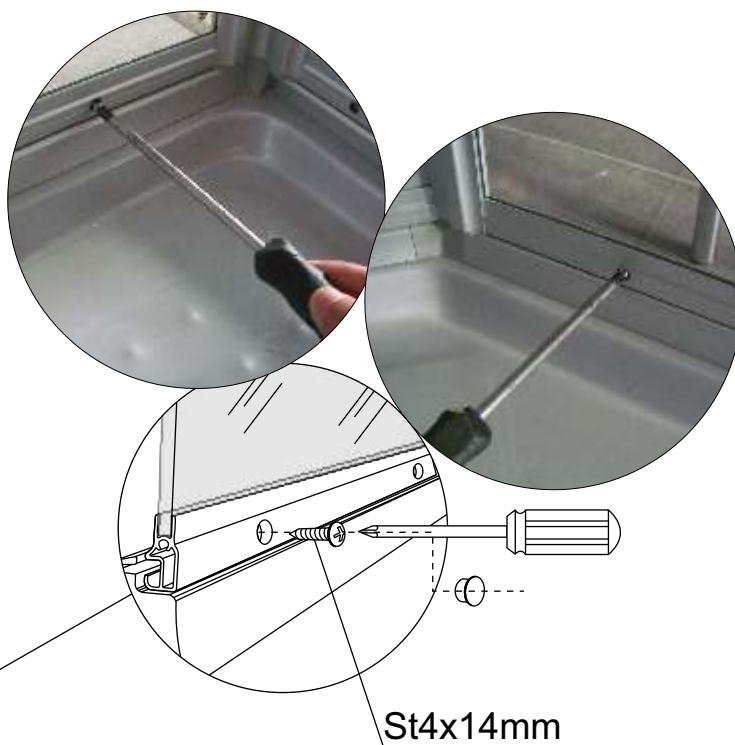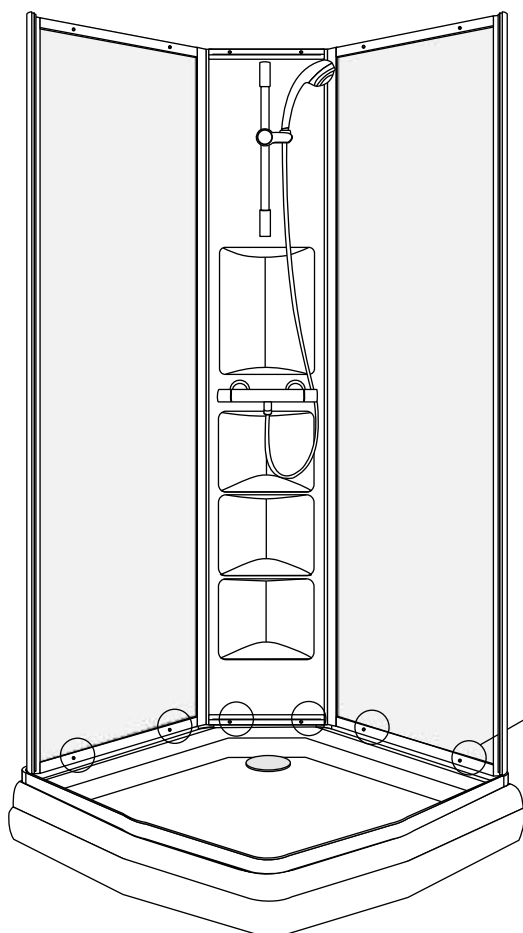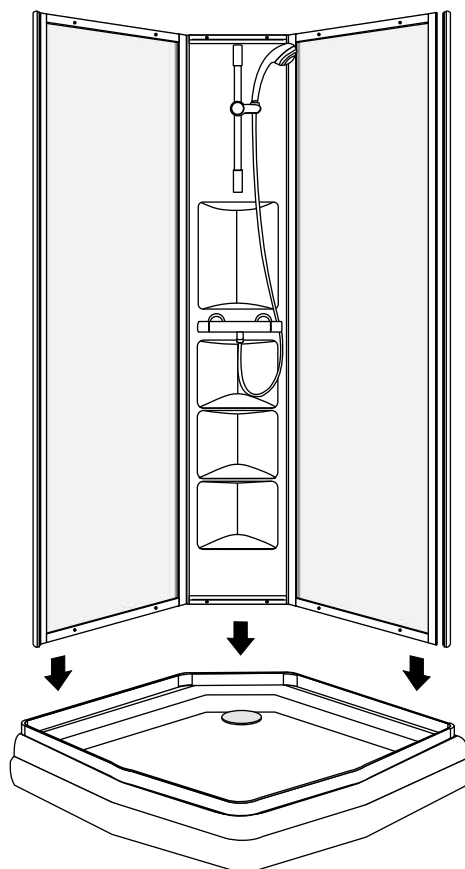





Installation instructions

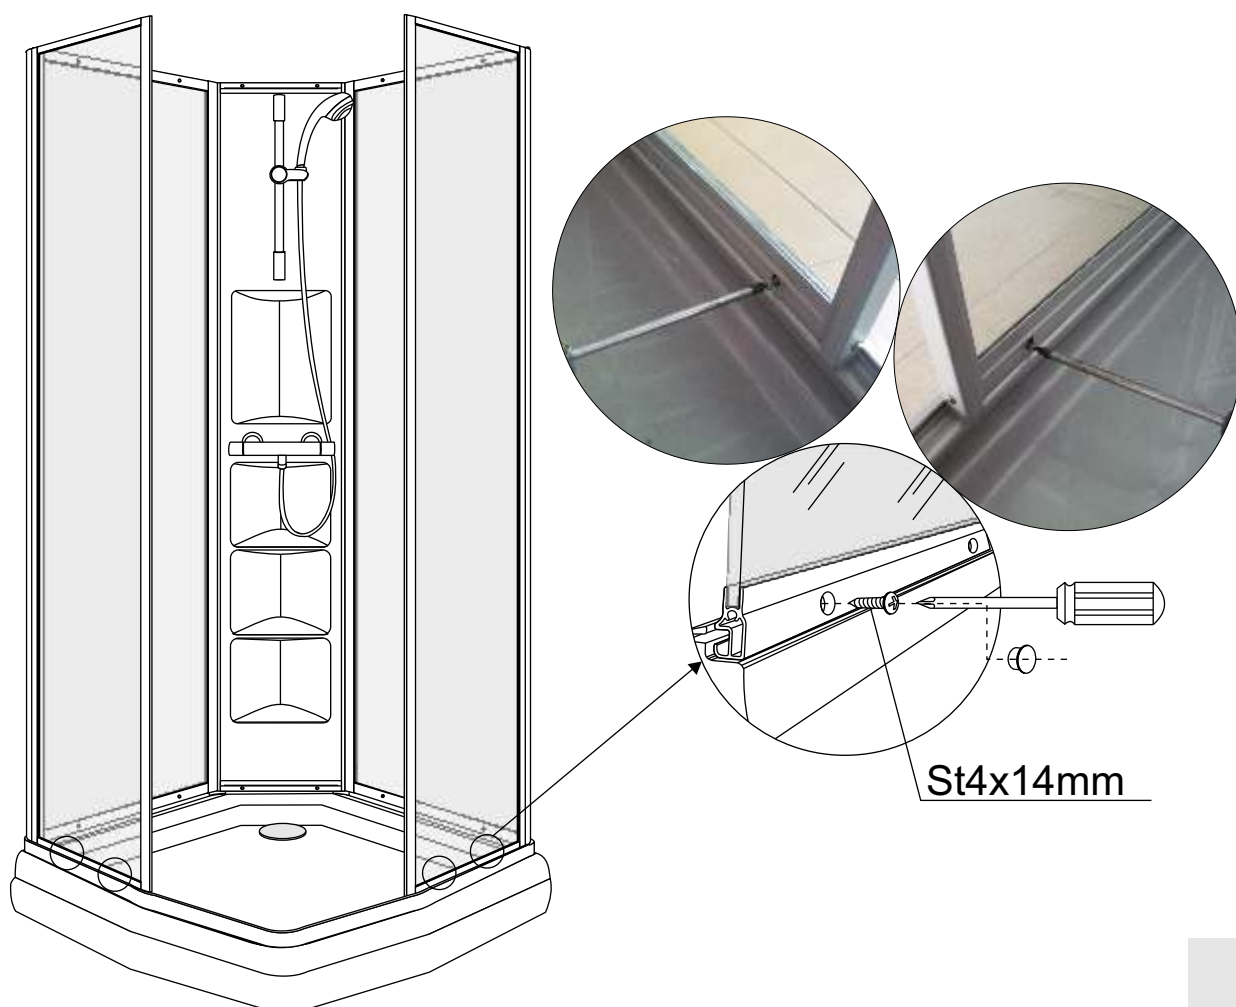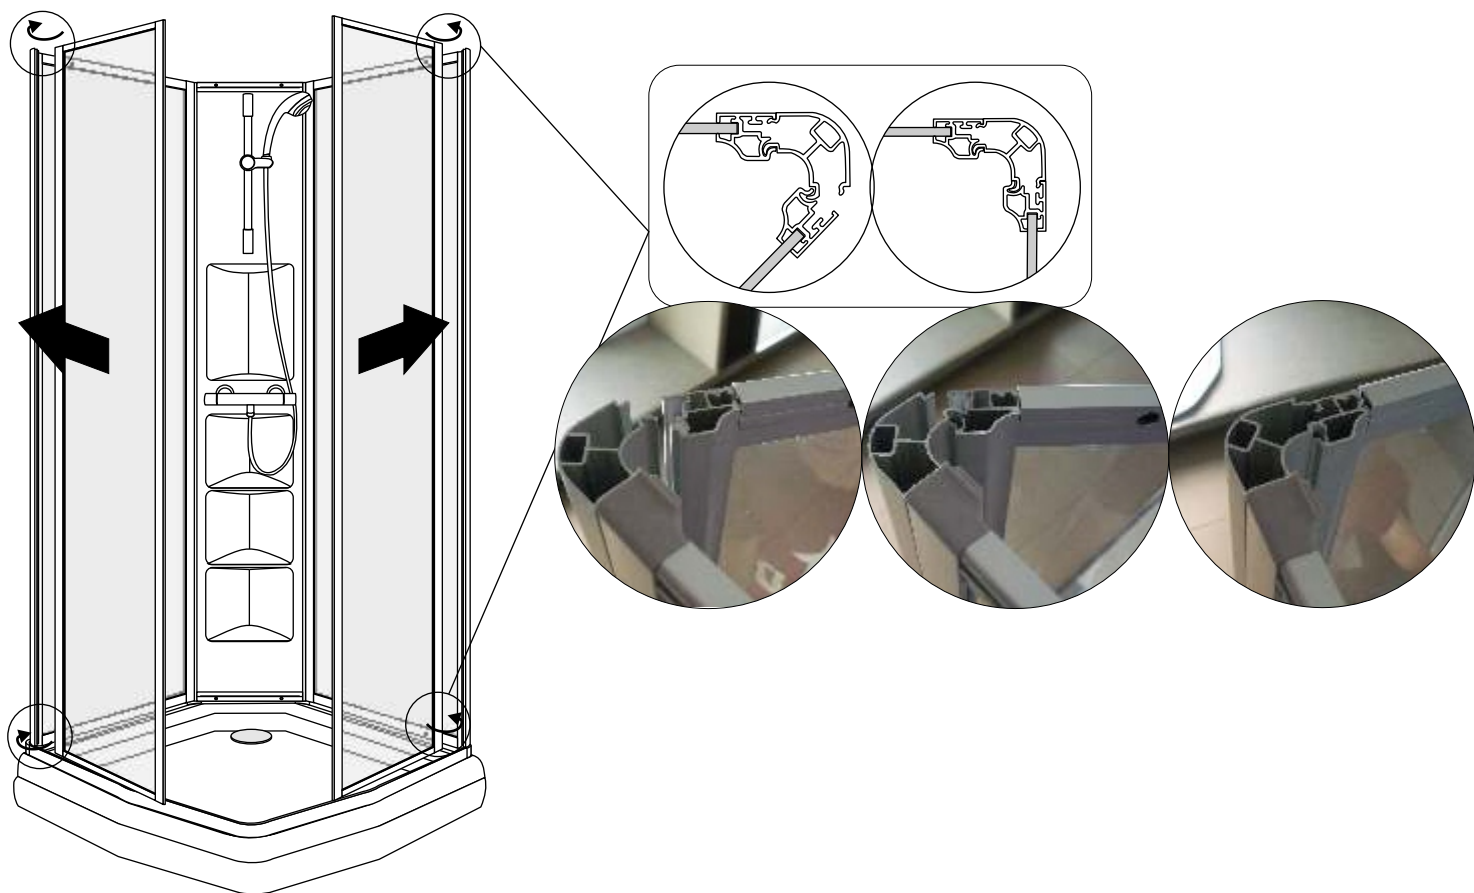

Installation instructions

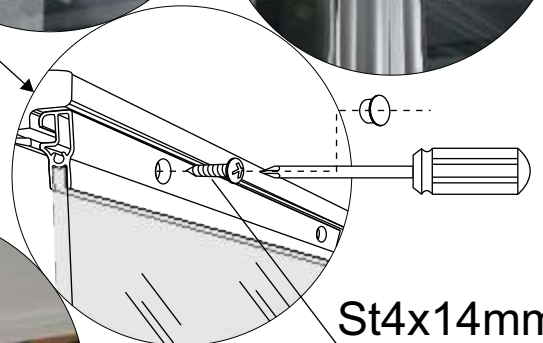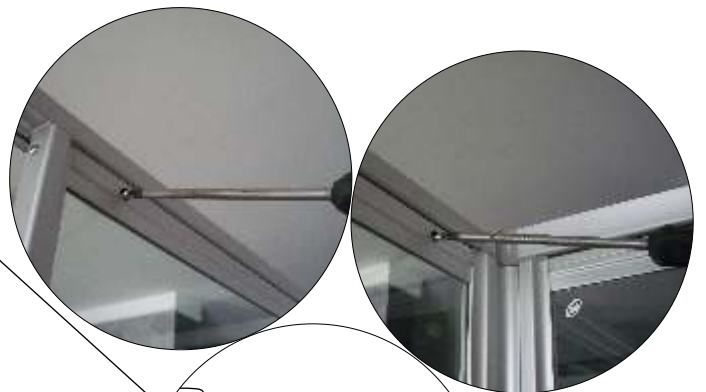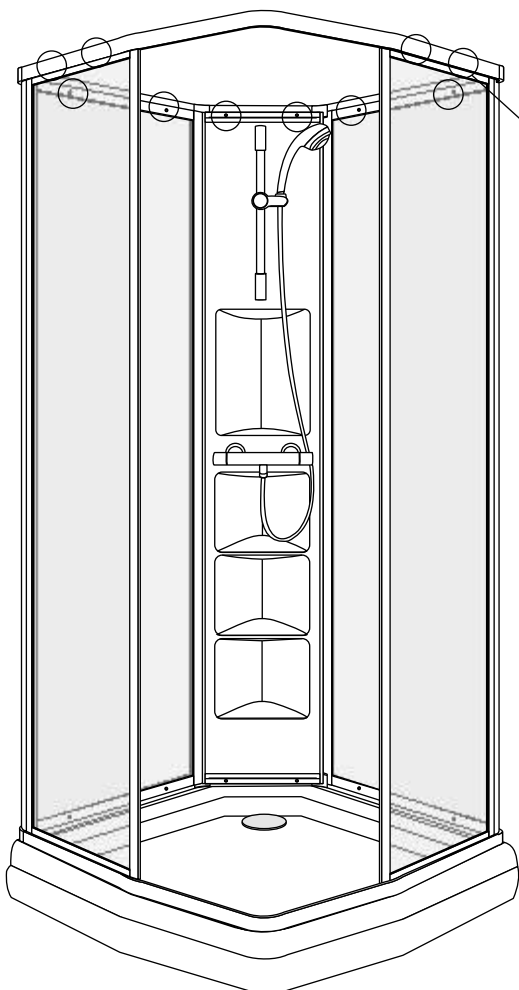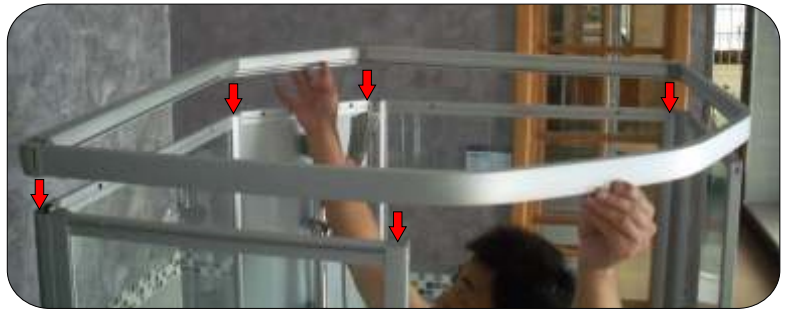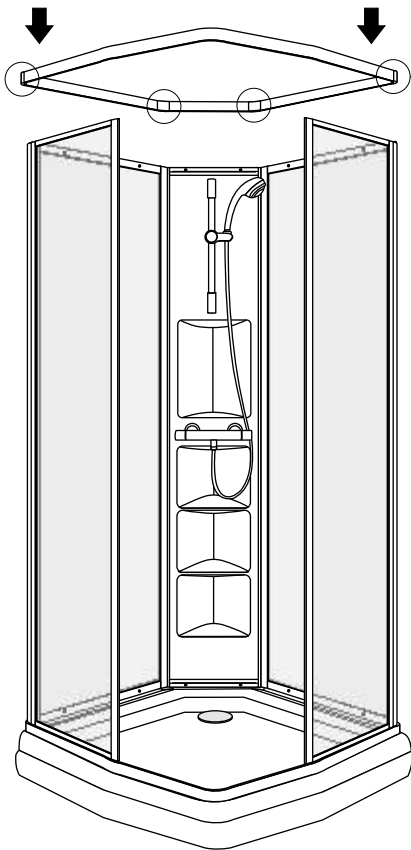

Installation instructions

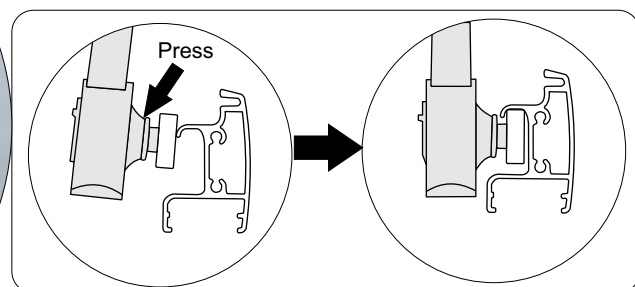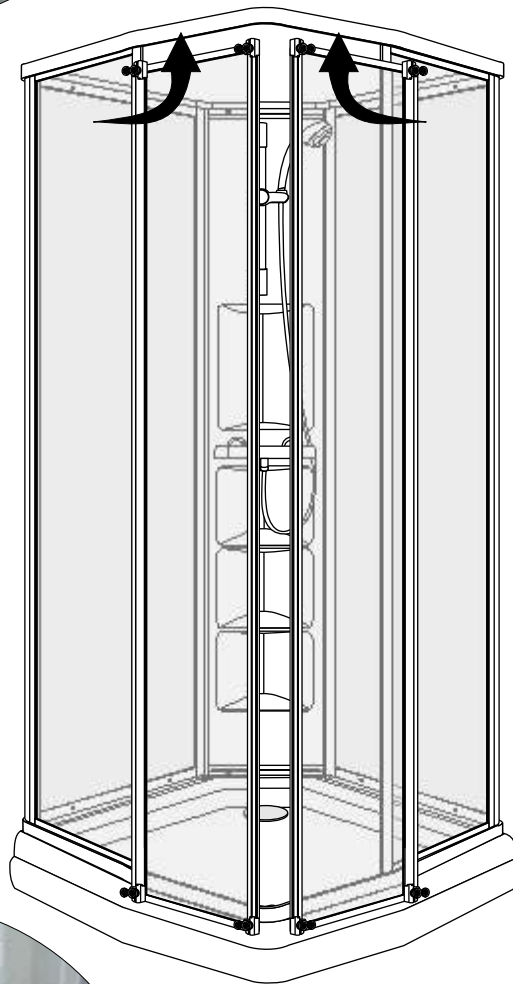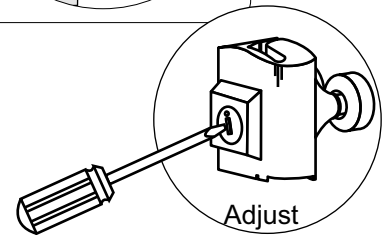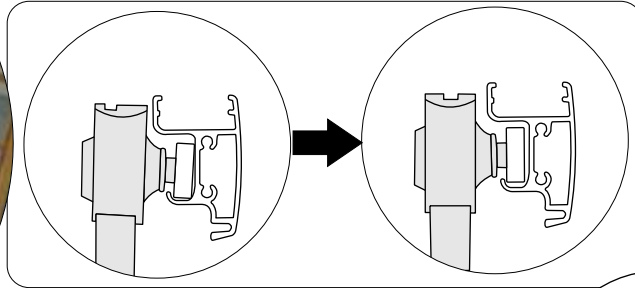

Installation instructions

